


GTX Strobe USER MANUAL

使用前请认真阅读此说明书
Please read the user manual carefully before use.

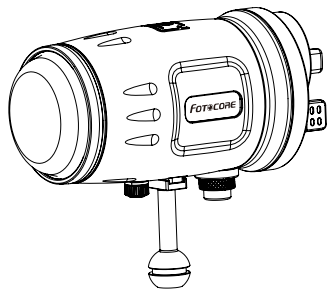

www.fotocore.com
sales@fotocore.com

Product Specification


Model	GTX
Mode	9 modes, 1st-7th for power level. 8th-9th for F3&F6: 3&6 flashes in single frame for slow shutter speed photo shooting
Guide number	30
Flash tube	Circular flash tube
Power	160 Ws
Connection	Optical cable / 6 pin syn cord
Illumination	130'
Battery pack	FOTOCORE battery pack (3x 18650 lithium batteries)
Battery pack power	37.8 Wh
Flash Capacity	500 flashes at full power, 3000 flashes at 1st mode
Recycle time	0.1s—1s
Flash speed	Continuous Unlimited flash sync with 10 flashes/sec at first mode
Power indicator	LCD displaying
Recycle Indicator	Red light while charged and red light blinking while charging
Color temperature	4800K
Waterproof Depth	100m
Focus/target light	5W / 500 lumens (center focus)
Dimensions	165*99mm
Weight (on land)	1080g without battery
Weight (underwater)	120g
Package	Strobe, battery pack, charger, user manual
Do not support S-TTL&TTL	
All the above parameters are based on FOTOCORE testing standard	

Operation Guide


All the data of this product are tested by dedicated battery and it varies with other or modified battery.

step 1: Please check the battery and make sure it is fully charged before using

Step 2: Connection : optical cable/6 pin syn cord/slave mode

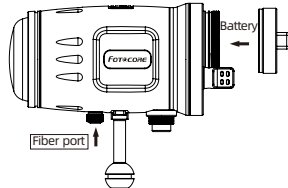

Step 3: Knob switch to M position

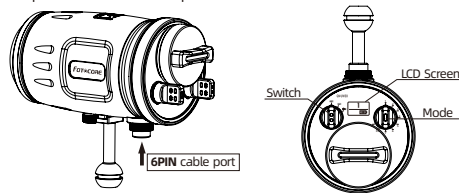

Step 4: Adjust mode 1-9 for different brightness

Maintenance Guide

This is a professional underwater strobe which may used in some severe environment. So please maintain it timely for a longer lifetime.

1. This is a high power tube strobe that release large heat. Do not use for more than 5mins on land to avoid tube or circuit burning.
2. Please take the battery pack out when not in use that helps to avoid self-discharge.
3. Please charge one time every three months if it will not be used for long time.
4. Please check and lubricate the O-ring before diving.
5. Please dip the flashlight in the freshwater for more than 10mins after diving, and clean up the sea salt, sediment and other corrosive substance.
6. Please take care of the plug when charging to protect the charging port.
7. Since this flashlight includes a battery pack, please handle gently to avoid the dangers from excessive collisions.
8. It isn't allowed to disassemble the battery since it may cause the explosion by a short circuit.
9. This product is prohibited from using or playing with by children under ten.

After-sales Service

All FOTOCORE products have a warranty period, defective products can be replaced free of charge at your local distributor/dealer within 15 days of purchase. And after 15 days all defects/failures of FOTOCORE products will enter the free period, and the free maintenance period will be within 15 months from the date of purchase. After 15 months, it will enter the limited warranty period, and labor costs will be charged, but no accessories or replacement parts will be charged. The warranty is invalidated in all of the following situations:

1. The product(s) is/are disassembled, reconstructed, and/or modified by unauthorized parties.
 2. The product(s) is /are damaged via improper use.
 3. The battery is leaked and damaged, including damage caused by untimely maintenance.
- For the latest news on FOTOCORE products and services, please contact your FOTOCORE distributor or send an email to sales@fotocore.com. The FOTOCORE official website shall prevail in case of any product data changes.