

Fantasea Line

Lens Gear SEL30M35 (Cat. No. 2203)

Instruction Manual

The **Lens Gear SEL30M35** allows manually focusing with the **Sony SEL30M35** lens when used inside housings featuring the Fantasea FML port system. For housings and lenses compatibility information, please visit the Fantasea website – www.fantasea.com



SPECIFICATIONS

- Material: NBR (Neoprene based rubber)
- Dimensions (diameter x height): 82 x 46 mm / 3.3 x 1.8 inch
- Weight: 58 g / 2.04 oz
- Manufacturer's warranty

ASSEMBLY INSTRUCTIONS

1. Mount the **Sony SEL30M35** lens on the camera.
2. Hold the **Lens Gear SEL30M35** in front of the lens so that the gear teeth are facing the lens. Install the **Lens Gear SEL30M35** on the lens by gliding it from the front of the lens towards the camera body (Fig.1).
3. **Note that the only proper position of the Lens Gear on the lens is demonstrated in Fig.1. Any other position of the Lens Gear will result with failure to operate the housing Lens Dial control.**
 - a. When properly seated on the lens, the front edge of the Lens Gear should reach about 0.5mm behind the front edge of the lens focus ring (Fig.1).
 - b. Make sure that the front edge of the Lens Gear is completely parallel to the front edge of the lens focus ring (Fig.1) rather than tilted (Fig.2 on the following page).
 - c. Pushing the Lens Gear all the way in towards the camera body (Fig.3 on the following page) will necessarily eliminate operation of the housing Lens Dial control.



Fig.2



Fig.3



4. Once the Lens Gear is properly installed on the lens, follow the housing instruction manual to install the camera inside the housing.
5. With the camera installed inside the housing and prior to closing the housing, test the housing Lens Dial by turning it in both directions (clockwise and counterclockwise) to ensure proper operation (Fig.4). Make sure that turning the housing Lens Dial doesn't tilt the Lens Gear. If required, reinstall the Lens Gear on the lens by following steps 2-3 above.
6. Close, seal and lock the housing by following the housing instruction manual.

Fig.4



CARE & MAINTENANCE

1. Please use the utmost care and do not use excessive force when assembling and disassembling the different parts, in order not cause any damage to the products.
2. Keep the Lens Gear away from extreme high temperatures, as under direct sunlight, since it might damage the product.
3. Do not clean the Lens Gear with any chemical solvents or other materials, which might cause damage to the product.
4. When storing the Lens Gear and during transportation, make sure that it is properly protected in order to prevent deformation of the product.
5. Do not store the Lens Gear in presence of chemicals, solvents or fuels.

For further information - www.fantasea.com, info@fantasea.com