



## 19549 C1018-Z

## Zoom gear for Canon EF-S 10-18mm f/4.5-5.6 IS STM


Please follow the instructions below to mount the dedicated zoom gear on the lens.

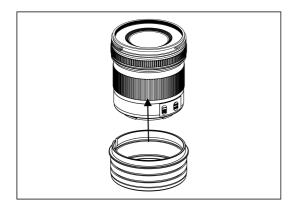

1. Insert the plastic c-ring as shown and place it over the lens rubber zoom ring.

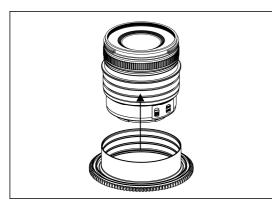

2. Insert the gear of C1018-Z on the plastic c-ring until it reaches the flange of the plastic c-ring.

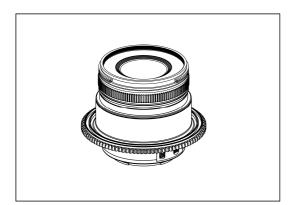

- 3. To remove the C1018-Z gear, reverse the above steps.
- 4. The tightness between the C1018-Z gear and the lens can be adjusted by removing or adding rubber grips on either sides of the plastic c-ring, spare rubber grips are included in the package.