

**Instruction Manual for  
M67 Flip Holder/Double Flip Holder for  
MWL-1**

PN# 86221, #86222

**FOREWORD**

Thank you for your purchase of a NAUTICAM product.

At NAUTICAM, we pride ourselves in the ability to recognize the requirements of professional as well as amateur underwater photographers and fulfill them through the innovative designs of our products. We strive to achieve a high level of user-friendliness by allowing stress-free installation and easy operation of all important functions of the camera.

Please read this manual carefully before using the product, this will maximize its performance as well as its lifetime.

**WARRANTY**

All NAUTICAM Products are warranted against any material and manufacturing defects for two years from the date of purchase for consumer use. This warranty only applies to products purchased from authorized NAUTICAM dealers and does not extend beyond the original retail purchaser.


To return your product for service, please contact your regional authorized service center(s). Please note that this warranty only applies when the product is purchased in the territory where the service center is located.

NAUTICAM does not hold responsibility for damage, of any nature, to any equipment used with and/or placed within our products.

NAUTICAM accepts no liability for any loss of captured images or the inability to capture images even if it is due to the malfunctioning of our products.

Unauthorized modifications and/or repairs of our products will automatically invalidate the warranty.

**INSTALL TO THE PORT**

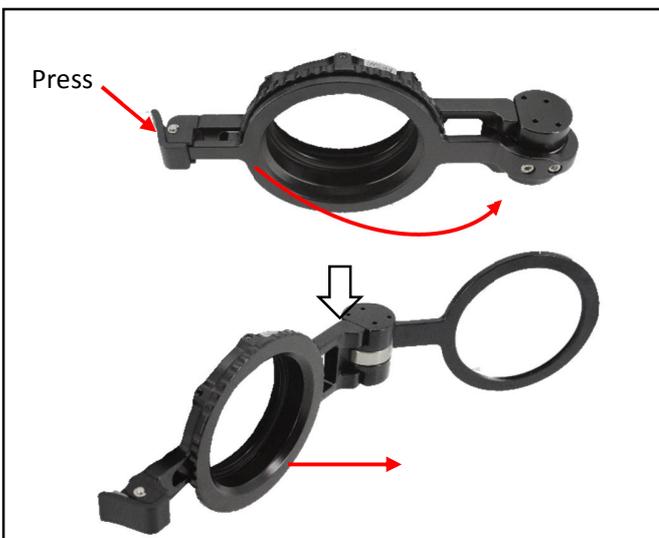


Press the lever and flip the holder to the side then remove the locking ring from the flip holder.



Align the two positioning screws on the back of the holder with the slots on the front of the port.

The position of the flip holder can be changed by relocating the two screws in the threaded holes around holder.

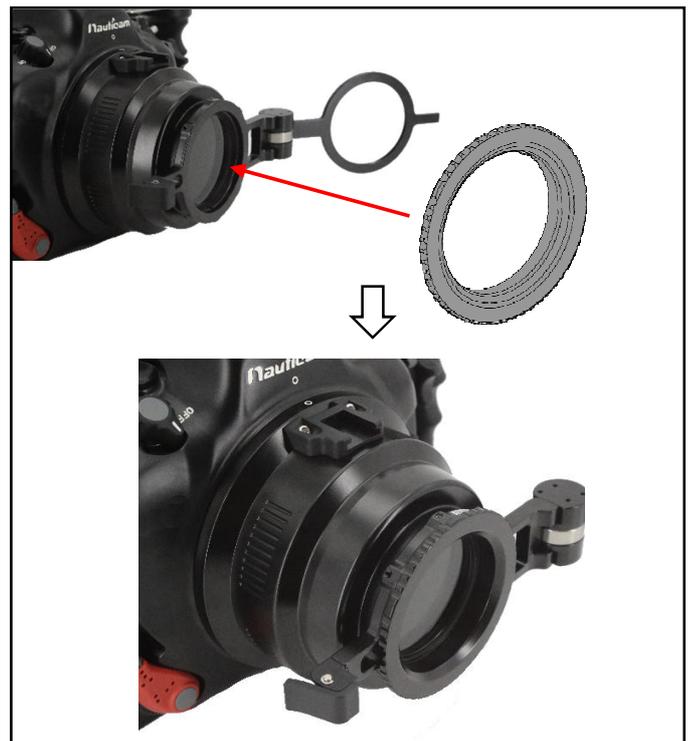

Fasten the holder by screwing the locking ring into the thread on the front of the port.

---Continue on next page---

Current as of 2019-12-27

---Continue from front page---

### CHANGING THE MOUNTING RING

A M67 mounting ring is supplied for directly mounting MWL-1 on the flip holder.

Follow below instruction to exchange the Bayonet Mounting Ring of MWL-1 to M67 Mounting Ring in order to be securely



Remove the 7x screws from the back of the lens.



Remove the bayonet mounting ring of MWL-1. Note that there are 4x small black cylindrical positioning pins. All 4 pins should remain in the back of the lens



Locate the 4 small sockets of the M67 mounting ring. Align with the positioning pins on the MWL-1 and place it on top.



Secure the mounting ring by tightening the 7x screws



Fastening the MWL-1 tightly on M67 flip holder or double flip holder. Please refer to MWL-1 to adjusting the lens hood position

Remark: Nauticam supports only e-manuals. Please download corresponding product manuals on [Nauticam.com](http://Nauticam.com) website, or contact us for e-manuals.