


# WEEFINE


## WFS05 FLASH LIGHT

### MANUAL

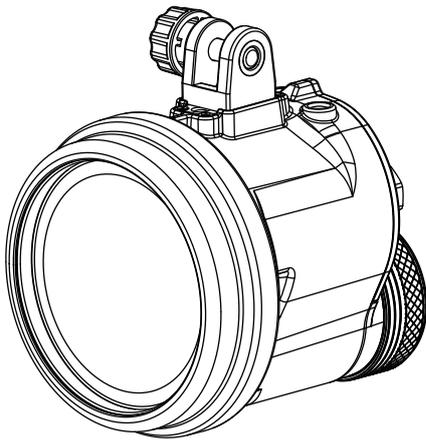

Please read the manual carefully before using the video light

### Component

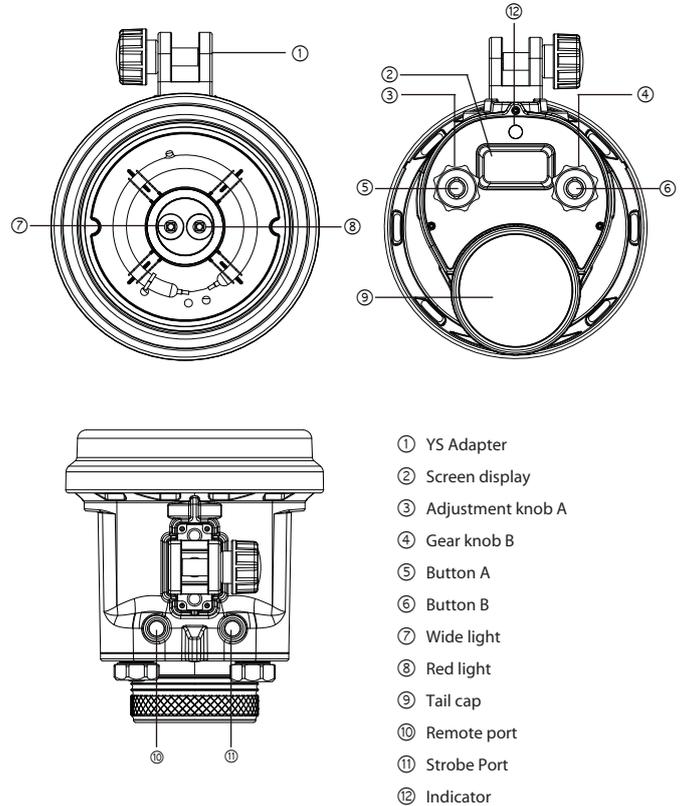


01


### Specifications

Full power guide number at 1m/IOS 100	24
Waterproof	100m
Max. power	80Ws
LED lighting	1 watt spot light and 1 watt red light
Brightness(Lumen)	200 lm ( Wide light )
Color Temperature	6000K ( Wide light )
Flash index level	GN/1/1.4/2/2.8/4/5.6/8/11/16/22/24
Flashes per full charge	Full power is greater than 1200 times
Recycle time	0.1s~1.5s (Depends on greater than flash intensity)
Battery	4*18650Li-ion batteries (3400 mAh)
Size	119 (L)x 119mm(W) x 135.5(H) mm
Weight	1050g on land (Include the battery ) 240g underwater (Include the battery )

### Unpacking

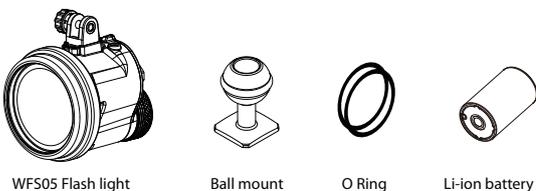


02

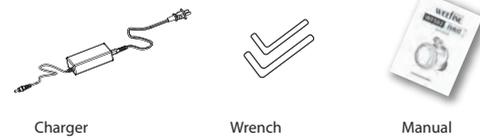

### To install the battery

1. Turn the tail cap counter-clockwise to open.
2. Loading the Li-ion battery into the tail cap, make sure the polarity battery must match the polarity of the diving light contacts.
3. Turn the tail cap clockwise to reattach the tail to the head of the flash light.

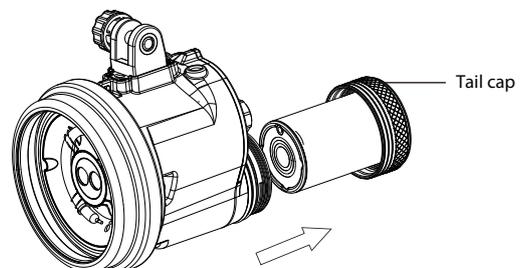

03

### Operate the light

(OFF state), Press the buttons A and B at the same time adjust the screen orientation mode (flip screen up and flip screen down), Press and immediately release the Button A enter the screen mode, Press the buttons A and hold it down for more than 2 seconds

### Turn ON

(OFF state) Press and immediately release the Button A

### Turn OFF

(ON state) Press the buttons A and hold it down for more than 2 seconds

### Trigger flash

Press and immediately release the Button A (it does not include synchronization mode).

### Switch mode

(ON state) Press and immediately release the Button A



Press the buttons B and hold it down for more than 2 seconds



S1=Single trigger mode S2=Double trigger mode Sync=Synchronous mode

### Brightness adjustment

(Adjustment knob A) Rotate clockwise + ;

Wide light: Totally 10 levels from 0 to 100, A level is 10% ;

(Adjustment knob A) Rotate counterclockwise- ;

Wide light: Totally 10 levels from 100 to 0.

04

### Memory function


On normal mode, the current state will be recorded when the machine is shut down, and the same state will be recorded when the machine is turned on again.

### Low power protection

When the battery voltage is too low, all the Buttons are invalid and can only be turned off.

### To Charge the battery

1. Insert the DC charger plug into the battery.
2. Plug the charger into the wall receptacle. When the battery begins to charge the indicator light on the charger will be red.
3. When the battery is fully charged the indicator light on the charger will turn green.

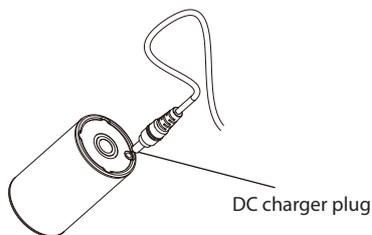

### General Maintenance

There two-rings in the tail cap. Use silicone to keep the O-rings well lubricated. It is important to lubricate the o-rings if the flashlight has not been used in a long time or if the o-ring is hard. If the O-ring is damaged, broken or deformed it should be replaced with the spare.

Note : Do not use a sharp tool to remove the O-rings.

06

### Brightness adjustment (Flash)

On S1/S2 mode ( it does not Flash intensity display synchronization mode) When the gear knob B is rotated to different gears, the guide number will change according to the current gear value to adjust the intensity of the flash.

### Strobe mode

 
On S1 mode, Flash light flashes when a single flashing signal is received. On S2 mode, Flash light flashes when two flashing signals are received within 1 second. On Sync mode, (it must be connected to fiber optic cable) received flash signal, according to the letter To flash.

### Function of remote control

( the remote control button for the first time is invalid ) Press the middle button and hold it down for more than 2seconds



Press and immediately release the middle button (On Flash mode)



Press and immediately release the middle button (On LED mode)



Short press left button or right button, in L mode, you can adjust the intensity of current light (red light/astigmatism).

05

### Warning

1. Do not open the tail cap when the video light is in the water.
2. Do not shine the light directly into your eyes or another person's eyes.
3. Do not touch the battery and charger with wet hands.
4. Use only the manufacturer's battery and charger with this system.
5. If the flash light will not be used for a long period of time the battery should be removed.

Failure to comply with these warning may result in damage to the video light and will nullify the warranty.

### Warranty

We provides a warranty against manufacturer defects for 1 year starting from the date of purchase. Manufacturer defects occurring within 15 days of the date of purchase will result in an exchange of product at the vendor. All other manufacturer defects occurring within 1 year of the purchase will be repaired at no cost. Proof of purchase is required for warranty support. The warranty does not cover failures or defects resulting from misuse (e.g; modification; damage), natural disasters, or battery issues, including incorrect battery installation.

07